


Light Sensor Bobcat™

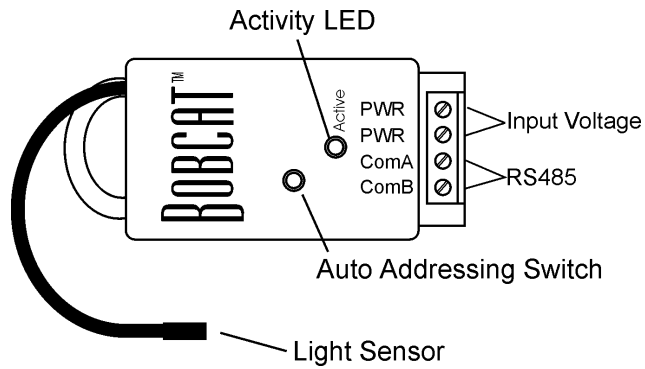

Introduction

The Light Sensor Bobcat™ is a single point module providing light level readings.

Specifications

Power:	Input Voltage	9 - 12V DC or AC
	Input Current Max	30mA
Dimensions:	1.3"W x 2.5"L x 0.6"D	
	Probe Cable 18"	
Operating Temperature:	Bobcat™	32°F to 158°F
	Sensor	-40°F to 167°C

Setup

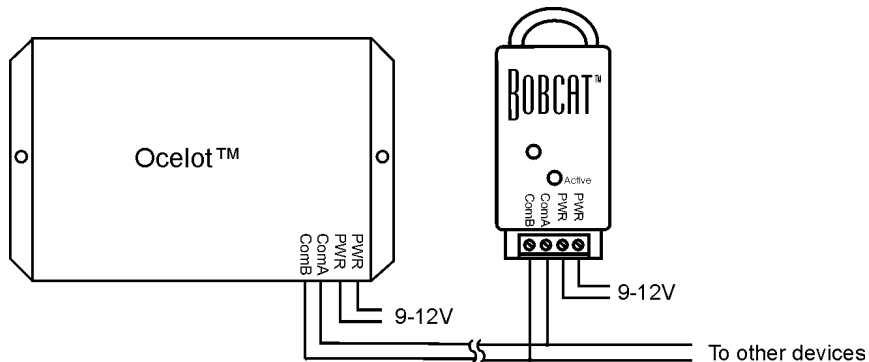


Figure 1. Typical Wiring Diagram

Note: The Bobcat™ may be used outdoors but must be installed in an area so that it will not get wet!

Operation

LED Codes

ON solid – Bobcat™ has not been addressed

Slow Blink – Bobcat™ has a valid address

Fast Blink – Auto address mode active

On solid, then Rapid blink - ADICON™ communications active

Parameter	Function
1	Module Address
2	Bright Threshold
3	Dark Threshold
5	Returned Data Mode 1 = Light Level, 0 = Light/Dark Mode (default)

Table 1. Light Sensor Bobcat™ Parameters

Light Sensor Bobcat™ Data Modes

Analog Mode


When parameter 5 is set to a 1, the Light Sensor Bobcat™ will return a value (0 – 255) based on the amount of light falling on the sensor. A return value of 255 is maximum brightness.

Digital Mode

When parameter 5 is set to 0 (factory default) the Light Sensor Bobcat™ will return a 1 or 0 based on comparing the light level to the threshold values. When the light level is greater than the Bright Threshold the Bobcat™ will return a 1. When the light level is less than the Dark Threshold the Bobcat™ will return a 0. The return value will not change until the light level has crossed a threshold and remained there for 10 seconds.


Viewing Bobcat™ Data

The CPUXA access screen of C-Max™ now has a data field to show the decimal value of data returned by a module. To view the data field, move the horizontal scroll bar all the way to the right. See the sample screen below. Data shown for a Bobcat™ module will be offset by 100, that is, the value shown is 100 greater than the actual data.

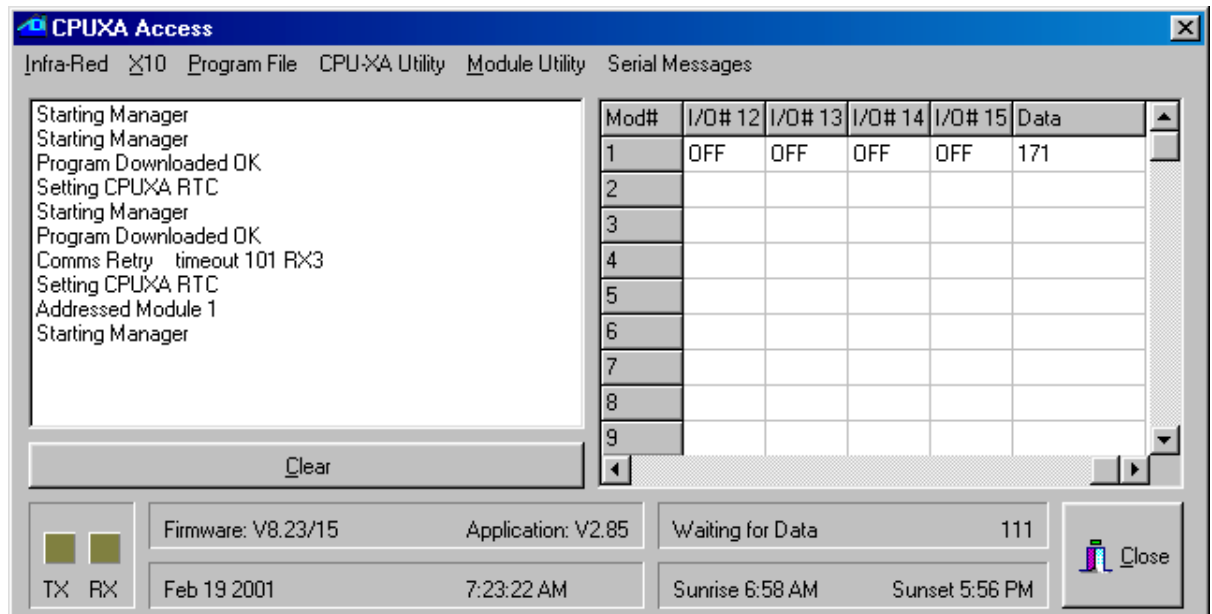

Setting Threshold Values

The threshold values are stored in parameters 2 and 3 (see Table 2). C-Max™ is used to change a parameter value. Below is a sample screen of the Module parameter utility. For more information about changing module parameters see the application note *Changing Module Parameters*.

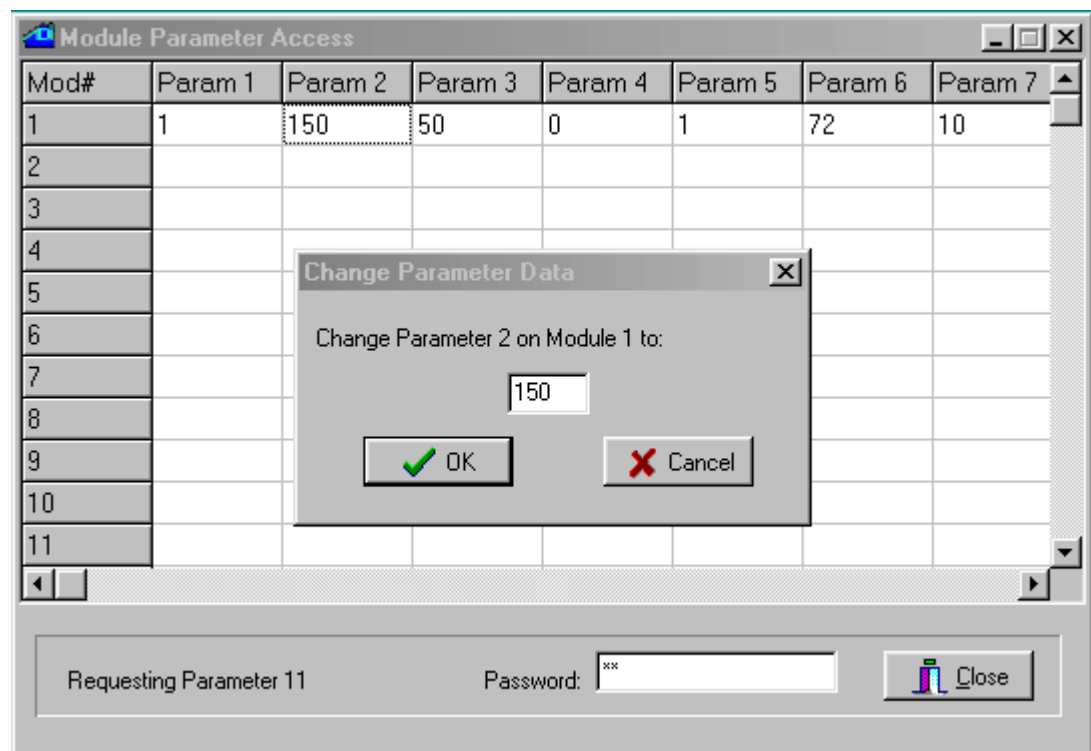

Accessing the Bobcat™ data

Analog Input Example: Using a light sensor to turn outside lights on and off

Parameter 5 of the Light Sensor Bobcat™ must be set to 1 to use analog mode. Now determine the threshold voltages of when you want the lights to turn on and off. For our example we will use 50 to turn the lights on and 150 to turn the lights off. The code example below shows how to turn the lights off after sunrise only if there is enough light and turn the lights off after dusk when dark enough. In this example, the more light on the sensor the smaller the analog reading.


The screenshot shows the 'Ocelot/Leopard/CPU-XA Control Wizard - Code Editor V1.61e' window. On the left is a sidebar with a 'C-Max™ Control' logo and buttons for 'Clear Line', 'Delete Line', and 'Insert Line'. The main area contains a table with 4 columns: 'Line#', 'Program Text', 'Comments', and 'Reference'.

Line#	Program Text	Comments	Reference
1	If Time of Day is > Sunset + 0 minute(s)	After Sunset	00C0-8078-0000
2	And Bobcat# 0 Data is < 50	Light level is low	0C61-0000-0096
3	Then Module# 3/ Point# 1 Turns ON	Turn on lights	0400-0301-0001
4	If Time of Day is > Sunrise + 0 minute(s)	After sunrise	00C0-4078-0000
5	And Bobcat# 1 Data is > 150	Light level is high	0C60-0100-00FA
6	Then Module# 3/ Point# 1 Turns OFF	Turn off lights	0400-0301-0000
7	End of Program		7FE0-0000-0000

Below the table are two panels. The left panel, 'Function', has a 'Type' column with various options like 'Module / Point', 'Module / Param', 'Receive X10', 'Compare Bobcat Data', etc. The 'Compare Bobcat Data' option is selected. The right panel, 'Compare Bobcat Data', has a 'Bobcat Address' field set to 0, an 'Operator' dropdown with 'is <' selected, and a 'Data' field set to 50. An 'Enter' button is at the bottom.

Example of Digital Input

Using the threshold calculated in the above example lets now use the Light Sensor Bobcat™ in digital mode by setting parameter 5 to 0. Use C-Max™ to program parameters 2 and 3 to the thresholds calculated in previous example.

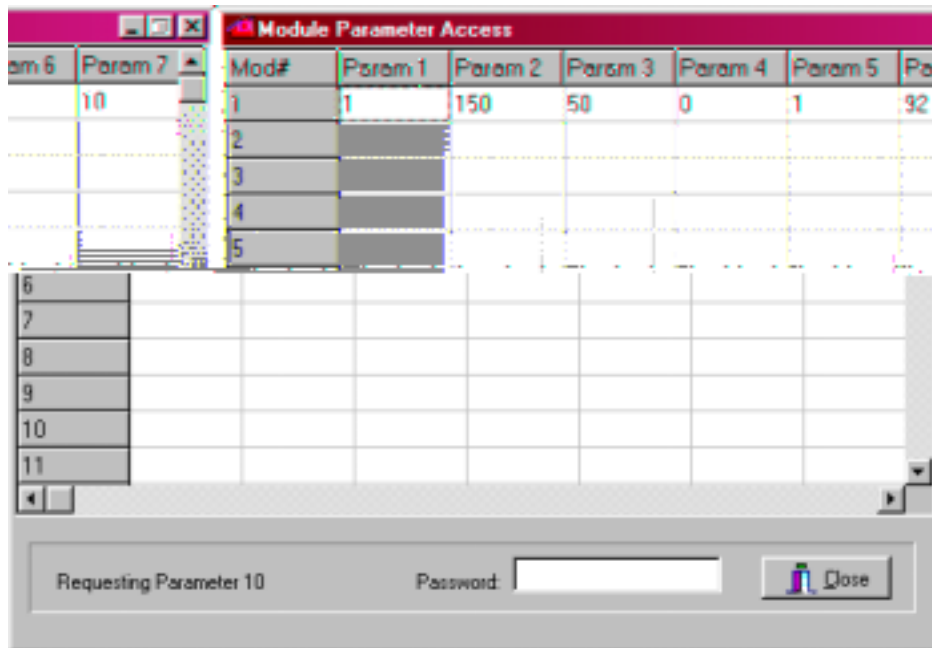

Now we write a program to turn the light off when the Bobcat™ returns a 1 and turn them on when the Bobcat™ returns a 0.

Line#	Program Text	Comments
1	If Bobcat# 1 Data becomes = 1	When it becomes light outside
2	Then turn X10 A/1 OFF	Turn off driveway lights
3	If Bobcat# 1 Data becomes = 0	When it becomes dark outside
4	Then turn X10 A/1 ON	Turn on driveway lights
5	End of Program	
6		
7		

In this example the returned value will not change until the light level has crossed a threshold and remained there for 10 seconds.